

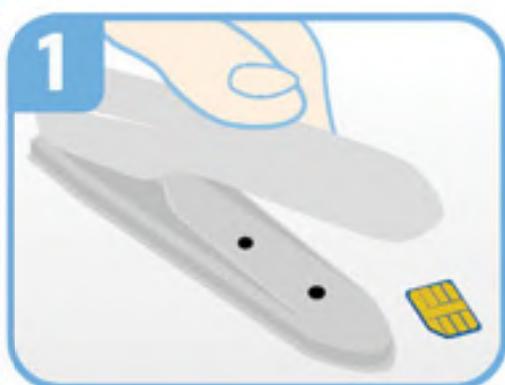


# MAGICSIM ELITE CUT - GALAXY NOTE

## INSTALLATION GUIDE

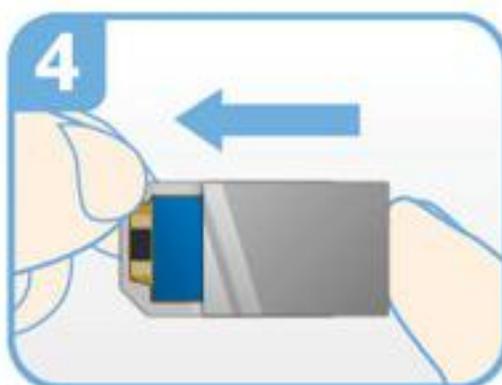

- 1 Insert your standard-size SIMs into the MAGICSIM CUTTER and press down firmly to transform them into NANO SIMs.
- 2

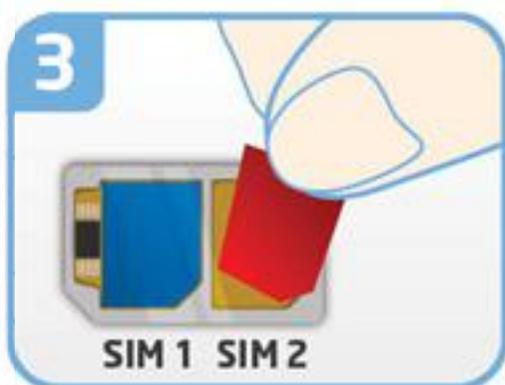

- 3 Insert your 2 SIM cards, chip side down, into the 2 SIM slots in the MAGICSIM adapter.

Carefully slide the appropriate metal sleeve over the adapter and lightly press together to ensure the connection between the SIMs and the adapter has been made.

4a  
4b



- 5 Insert the MAGICSIM adapter into your phone.




- 6 Replace your battery and your mobile phone cover back on.

- 7 Turn your phone on and locate the STK Menu (sometimes called Dual-SIM or SIM TOOL KIT). This is located in the Apps folder in smartphones and usually in the "Networks" section of older phones.
- 8

The STK menu can be used to switch SIMs, select your Dual SIM mode, set your switching Autotimer, and manage all things Dual SIM-related on your phone.

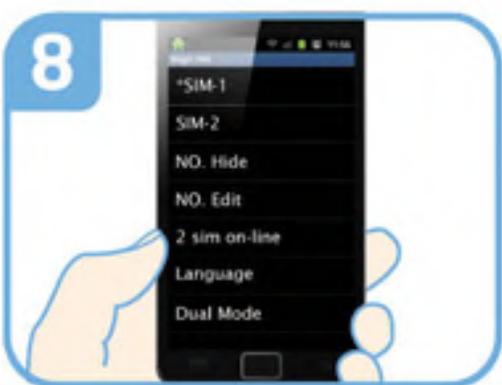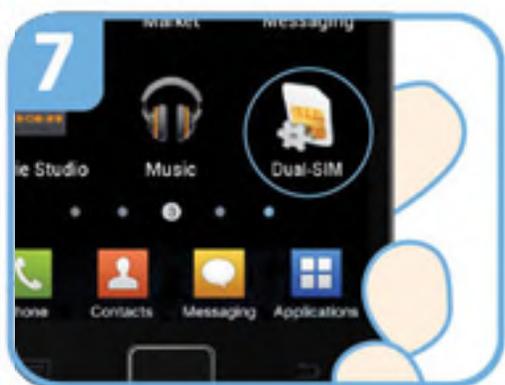

## STK MENU

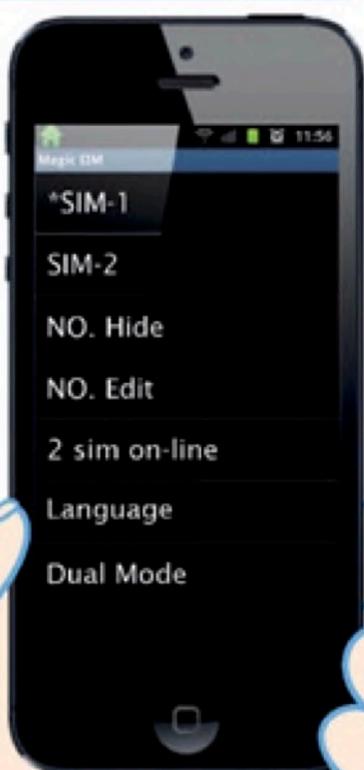

### **SIM-1:**

Selects SIM 1 as your active SIM.

### **SIM-2:**

Selects SIM 2 as your active SIM.

### **NO. Hide (not recommended):**

Bypass your usual answerphone message so your inactive SIM greets all calls with: "the number you have dialed is not connected".

### **NO. Edit:**

Renames SIM 1 and SIM 2 as numbers of your choice. Your phone will indicate which number is currently active on the home screen.

### **2 SIMs ON-LINE (autotimer):**

Programs the adapter to autoswitch SIMs at a timed interval. Simply set the amount of time each SIM to be active: e.g. SIM 1 - 30, SIM 2 - 10 sets SIM 1 as active for 30 mins before swapping to SIM 2 for 10 mins. The minimum time we recommend settings each SIM for is 10 mins.

### **LANGUAGE:**

Selects the STK menu language. You can choose between English, German, Italian, Spanish, Turkish and Russian.

### **DUAL MODE (007 mode):**

Selects '007 mode'. In '007 mode' you can switch SIMs simply by dialing '001' (for SIM 1) or '002' (for SIM 2) on your phone. This option causes the STK menu to temporarily disappear - to retrieve the STK menu and exit '007 mode' dial '007' on your phone.